MITO METER 2.0 [EURO]

Electromagnetic Field Meter User Manual (XVI)

Firmware 1.2.07



Developed by EnviroSens & Blakes Electronics Integrators

Introduction

The MITO METER 2.0 [EURO] is a compact, easy-to-use, yet sophisticated EMF/RF (Electromagnetic Field/Radio Frequency) screening tool. It measures electromagnetic field and radio frequency intensity from a wide range of sources—including power lines, fuse boxes, household appliances, electronic devices, and wireless technologies such as spy cameras, tracking devices, wireless bugs, Wi-Fi, Bluetooth, 5G microwave radiation, and similar equipment—across a broad frequency range.

As the world's smallest 3-in-1 EMF/RF meter—weighing less than 2 ounces (50 grams)— It is also ideal for discreet carrying or concealment, allowing users to log radiation levels in sensitive or restricted areas with its built-in record and playback functions.

Designed as a Building Biology pre/post-screening tool, this device is particularly useful for those familiar with Building Biology's recommended guidelines. It features a bright, easy-to-read 18-step LED display, allowing users to effortlessly monitor their surroundings in everyday life.

For added versatility, an optional USB connection kit allows the three main metering measurement modes to interface with a computer, Mac, or Android device—enhancing its value for research and technical applications.

Important Notice

The Mito Meter displays measurement intensity in three colours: green, yellow, and red. These colours serve as a visual guide and do not indicate whether a reading is definitively safe or unsafe.

In general, lower readings, less noise, suggest an environment that aligns more closely with natural electromagnetic background levels, which is important for overall well-being.

This device is designed for both non-professionals and professionals to easily screen EMF/RF levels using a simple and intuitive interface. However, measurements intended for legal, or compliance purposes require specialized equipment and trained operators.

Package Contents

- Pre-installed LiPo rechargeable battery
- Standard USB to Mini-USB charging cable
- Velcro mounting solution
- Rear-mounted alloy body contact voltage pad
- Protective carry pouch
- Pre-installed custom calibration firmware

Charging LiPo Battery

To charge the Mito Meter battery, use the supplied USB cable to connect it to a USB charger or computer. The front Red LED will be on during charging and turn off once the battery is fully charged. A full charge provides approximately 8 hours of operation and 48 hours on LFM-X Mode

(Continuous run time can be achieved using a connected external USB power source.)


Important: When the battery charge drops below 10%, two solid green lights will appear in **RF Mode**, regardless of whether any RF is detected. When in **LFE Mode** and the battery charge drops below 10%, one solid green light will appear regardless of whether any electric field is detected.

To avoid the above scenario, make sure the battery is at least half-charged before heading out. Charging for just 10 minutes from a flat battery will provide approximately 50% charge—plenty enough to screen properties for a few hours.

Turning ON the Mito Meter

When the meter is powered on, it performs a quick self-test and displays the battery charge percentage. This sequence lasts approximately 3 seconds. The first LED sweep to the right indicates that the meter is powering on and running a self-test. This is followed by a second LED sweep to the left, which displays the battery charge level. One red light means the battery charge level is less than 10% and the meter shouldn't be used.

Turn the meter on with the **Power ON/OFF switch**.

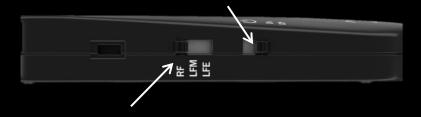

Use the **Mode Switch** to select a detection mode:

- RF Mode Measures Radio Frequencies, also referred to as microwaves, Wi-Fi and 5G.
 - o Range: 100MHz to 8GHz
 - Alarm One: Sounds at 500 μW/m²
 - o Alarm Two: Sounds when the maximum power value is exceeded@100,000 μW/m².
- LFM Mode Measures Low-Frequency Magnetic fields.
 - o Range: 40Hz to 10kHz
 - o Alarm One: Sounds at 200 nT
 - O Alarm Two: Sounds when the maximum power value is exceeded@2,000 nT.
- **LFE Mode** Measures Low-Frequency Electric fields, also referred to as e-Fields.
 - o Range: 40Hz to 50kHz
 - o Alarm One: Sounds at 30 V/m
 - o Alarm Two: Sounds when the maximum power value is exceeded @1,000 V/m.

Understanding the Readings

uW/m² (microWatts per square meter)

Used to measure the power density of an RF (Radio Frequency) source.

This value is used for measuring RF radiation from:

4G/LTE/5G cell sites, phones, smart meters, Wi-Fi, Bluetooth, wireless devices, and microwave ovens.

 $1,000 \,\mu\text{W/m}^2$ (microwatts per square meter) = $1 \,\text{mW/m}^2$ (milliwatt per square meter)

nT (nanoTesla)

The magnetic flux density unit (nT) is used to measure alternating current (AC) magnetic field intensity, such as that from:

The PowerGrid, fuse boxes, home appliances, electronics, laptops, phones, cables, and vehicles.

100 nT (nanotesla) = 1 mG (milligauss)

V/m (Volts per meter)

A unit of measurement for electric field (e-Field) strength.

Used to measure the intensity of an electric field near voltage sources such as:

Cabling, water pipes, power lines, power outlets, hardwired laptops, metal structures and devices.

uW/m²	nT	V/m	
0.5 100	10 ₁₃₀	2 ₅₀	
1 200	15 ₁₇₀	3 80	
2 ₅₀₀	20 ₂₂₀	4 120	
3 _{1k}	30 ₂₈₀	6 ₁₈₀	
5 _{2k}	40 ₃₅₀	8 240	
10 _{5k}	50 ₄₃₀	10 320	
20 _{10k}	60 ₅₅₀	15 ₄₅₀	
30 _{30k}	80 700	20 600	
50 _{100k}	100 _{2k}	30 _{1k}	

Measurement Methods

The dynamic LED window design allows for quick and intuitive monitoring across a broad measurement range, enabling users to interpret readings at a glance or even through peripheral vision—much like a Formula One race car display. This level of visual feedback is not achievable with numerical readouts alone and can be seen at a distance in both full sunlight and dark situations.

There are **18** intensity levels, displayed using **9** LED lights. By matching the LED reading with the corresponding numbers on the meter, numerical values can be noted.

The first **nine LEDs**—the **main working window**—are the primary focus for EMF Field Professionals and Building Biologists when assessing the main EMF/RF exposures in typical environments. As radiation levels rise **above normal testing conditions**, the coloured LEDs move beyond the working window, leaving only a **red LED**. If levels **exceed the meter's limits**, the LED display will **max out** and a **high-pitch alarm** will sound, with **no LEDs illuminated**. This is rarely the case, as far as background radiation levels go in homes and the workplace.



RF Mode – Working Window

Most background RF levels fall within the first 9 LED lights — Our Working Window — ($<50 \,\mu\text{W/m}^2$) unless you're near a cell tower or strong transmitter. Ideally, you want **no LEDs lit** when standing outside your home, but this is increasingly rare today, even in rural areas.

For your sleeping sanctuary, aim for **below 0.5** μ W/m² (no LEDs), as maintaining a low-exposure environment is one of the most important steps you can take for more rejuvenating sleep.

Some sensitive people struggle living in background levels around $1-10 \,\mu\text{W/m}^2$ Higher readings may require shielding, and costs rise quickly when signals become stronger and/or come from multiple directions.

Pattern Sequence	microWatts (μW/m²)	LED Display Results
1 Green	$0.5 \mu \text{W/m}^2 >$	•••••
2 Green	$1 \mu W/m^2 >$	
3 Green	$2 \mu W/m^2 >$	
4 Green	$3 \mu W/m^2 >$	
4 Green, 1 Yellow	5 μW/m² >	
4 Green, 2 Yellow	$10 \mu\text{W/m}^2$ >	
4 Green, 3 Yellow	$20 \mu W/m^2 >$	
4 Green, 3 Yellow, 1 Red	$30\mu W/m^2 >$	
4 Green, 3 Yellow, 2 Red	$50 \mu W/m^2 >$	
3 Green, 3 Yellow, 2 Red	$100 \mu W/m^2 >$	
2 Green, 3 Yellow, 2 Red	$200 \mu W/m^2 >$	
1 Green, 3 Yellow, 2 Red	$500 \mu W/m^2 >$	
3 Yellow, 2 Red	$1,000 \mu W/m^2 (1k) >$	
2 Yellow, 2 Red	$2,000 \mu W/m^2 (2k) >$	
1 Yellow, 2 Red	$5,000 \mu W/m^2 (5k) >$	
2 Red	$10,000 \mu W/m^2 (10k) >$	
1 Red	30,000 μW/m² (30k) >	
0 LEDs & Alarm	$100,000 \; \mu W/m^2 \; (100k) >$	

LFM Mode - Working Window

In inner suburbs, the average **background dynamic magnetic field levels** typically fall within the first meters 9-LED window working, **around 60nT to 100nT**. Those **in rural areas** or in **upper levels** of **high-rise apartments** will see levels **below 10nT**.

higher your readings will likely be.

As a general guideline, your primary objective should be to maintain a sleeping environment as **close as possible to 20nT or below**. For daytime exposure, background dynamic magnetic field levels should **remain under 100nT for pregnant mothers and children, and below 200nT for adults.**

Note: Recommendations based on The closer you are to high-load overhead power lines, poorly maintained power infrastructure, or dense city blocks, the Building Biology and the BioInitiative Report.

Pattern Sequence	nanoTesla (nT)	LED Display Results
1 Green	10 nT >	
2 Green	15 nT >	
3 Green	20 nT >	
4 Green	30 nT >	
4 Green, 1 Yellow	40 nT >	
4 Green, 2 Yellow	50 nT >	
4 Green, 3 Yellow	60 nT >	
4 Green, 3 Yellow, 1 Red	80 nT >	
4 Green, 3 Yellow, 2 Red	100nT >	
3 Green, 3 Yellow, 2 Red	130 nT >	
2 Green, 3 Yellow, 2 Red	170 nT >	
1 Green, 3 Yellow, 2 Red	220nT >	
3 Yellow, 2 Red	280 nT >	
2 Yellow, 2 Red	350 nT >	
1 Yellow, 2 Red	430 nT >	
2 Red	550nT >	
1 Red	700 nT >	
0 LEDs & Alarm	2,000 nT (2k) >	
o EEBS Q / IIGHH	2)000 III (2K)	

LFE Mode Working Window

The average person sleeps in an environment with **1 to 3 V/m** of **alternating current (AC) from household electrical wiring.** In some cases, due to wiring errors or continuity issues, levels can reach 10 to 30V/m, or in rare cases, much higher.

In nature, these electric fields do not exist, which is why the primary objective should be to maintain sleeping areas as close as possible to 0.3 V/m or below. For most people, achieving this requires modifying or turning off electrical circuits in their bedrooms. Since the Mito Meter only measures down to approximately 1 to 2 V/m, we recommend no LED lights at least 1 to 2 meters away from beds on LFE Mode.

As a general guideline, your goal should be to maintain a low exposure environment and reduce electric fields in areas where you spend extended periods. Minimize workstation and laptop electric fields by grounding the connected devices. If your readings are in the red, (Over 10 to 15 V/m) further mitigation steps should be considered. Read related post Here.

Volts Per Meter (V/m)	LED Display Results
2 V/m >	•••••
3 V/m >	
4 V/m >	
6 V/m >	
8 V/m >	
10 V/m >	
15 V/m >	
20 V/m >	
30 V/m >	
50 V/m >	
80 V/m >	
120 V/m >	
180 V/m >	
240 V/m >	
320 V/m >	
450 V/m >	
600 V/m >	
1,000 V/m (1k) >	
	2 V/m > 3 V/m > 4 V/m > 6 V/m > 8 V/m > 10 V/m > 15 V/m > 20 V/m > 30 V/m > 50 V/m > 120 V/m > 120 V/m > 150 V/m > 600 V/m >

Measurement Technique

The Mito Meter uses super sensitive single-axis directional antennas and a low-frequency single-axis sensor for measurements, requiring rotation in all directions/axes for the best results. (Far more sensitive than three-axis variants.) Move the meter around to identify the highest reading—the highest reading represents the most accurate value.

The **RF and LFE antennas** are located on the top left side of the device. Blocking them with your grip may reduce accuracy. For the most accurate LFE (electric field) readings, hold the meter at the very end of the case by placing your middle finger on the rear-mounted alloy ground pad while applying pressure with your thumb on the front of the case. Then point the meter in the direction you want to measure.

When using LFE Mode with the meter's rear-mounted alloy ground pad, test readings both with and without shoes. Additionally, compare your body voltage potential with and without grounding sheets or grounding pads—many earthing solutions are ineffective and offer little to no protection.

See 'EMF Basics' for further information <u>Here</u>.

Broadband Detection

- The Mito Meter is a broadband meter, meaning it detects all signals within its selected frequency range at any location.
- In RF mode, if a Wi-Fi router and a cell phone transmit at the same time, the meter captures both signals and shows a combined result.

Limitations of RF Broadband Meters

- All RF broadband meters, even professional versions, tend to underreport peak RF radiation in busy areas (e.g., cities)—sometimes by up to 10×.
- Real-time RF spectrum analysers with directional antennas are essential for precise signal measurements, accurately identifying individual signals, and calculating (adding up) total power levels. However, they are complex and extremely expensive.
- Broadband meters are popular for their ease of use, quick setup, and affordability.

Speed vs. Accuracy

- Fast RF meters capture more signals in high radiation environments and can capture fast bursts of radiation which is why people often refer to "fast meters" when discussing RF measurement. (The Mito Meter operates at 20,000 samples per second.)
- However, accuracy at low power levels and the ability to detect and listen to RF signals remain more important for assessing and reducing RF exposure in homes and workplaces.

Extended Modes

The Mito Meter features three extended modes: **RF-Xs Mode** (Sound Signature), **RF-X6 Mode** (Six-Minute RF Monitoring), and **LFM-X Mode** (PowerGrid Monitor). These modes serve as additional tools for EMF screening and mitigation while also assisting professionals in remote consultations with Mito users.

RF-Xs Mode: Sound Signature

This mode helps identify the source of radiation by its pattern — or what we refer to as the source's unique sound signature.

- 1. Make sure the speaker 🕩 is **switch is ON** and select **RF Mode**.
- 2. Quickly toggle the **MODE switch** from **LFE to RF twice** within two seconds. Two lights (orange and red) will start blinking.
- 3. Then move the **MODE switch** down to **LFM** and back to **RF**. Now move towards an RF source to listen to its Sound Signature.

$$RF \rightarrow LFE \rightarrow RF \rightarrow LFE \rightarrow RF ----- RF \rightarrow LFM \rightarrow RF$$

RF-X6 Mode: Six Minute Monitoring

This mode logs approximately 6 million samples over six minutes and then displays the **Average** and **Highest Peak** radiation results via the LED display, as well as gives an **accumulated peak score** based on the estimated **peak duration time** over the recorded six-minute event (See chart next page.)

Turn on the meter and select **RF Mode**.

- 1. Quickly move the **MODE** switch down to **LFE** and back to **RF** twice, within two seconds. Two lights will be blinking—one orange and one red. The meter is now recording (logging data).
- 2. After six minutes, results will be displayed as follows;
 - o **Average Peak**: Slowly blinking for six seconds.
 - Highest Peak: Fast blinking for six seconds.
 - Accumulative Peak Duration: Displayed for 10 seconds.

$$RF \rightarrow LFE \rightarrow RF \rightarrow LFE \rightarrow RF$$

RF-X6 Mode: Accumulative Peak Duration Chart

Pattern Sequence	Seconds - Peak Duration	LED Display Results
1 Green	0.1 sec >	
2 Green	0.2 sec >	•••••
3 Green	0.3 sec >	
4 Green	0.5 sec >	
4 Green, 1 Yellow	0.7 sec >	
4 Green, 2 Yellow	1 sec >	
4 Green, 3 Yellow	2 sec >	
4 Green, 3 Yellow, 1 Red	3 sec >	
4 Green, 3 Yellow, 2 Red	5 sec >	
3 Green, 3 Yellow, 2 Red	10 sec >	
2 Green, 3 Yellow, 2 Red	20 sec >	
1 Green, 3 Yellow, 2 Red	30 sec >	
3 Yellow, 2 Red	1 minute >	
2 Yellow, 2 Red	1:30 minutes >	
1 Yellow, 2 Red	2 minutes >	
2 Red	3 minutes >	
1 Red	6 minutes >	

Effectively, this represents your **Peak Radiation Dosage.** As you reduce your wireless gadgets your results will shift from red to orange, then into the green—or ideally, no results displayed at all.

If you live near a telecommunications **cell tower/site**, **TV broadcast antenna**, or a **radio broadcast antenna**, the **peak duration score** will always be **red**.

No results (no LED lights) are ideal for **bedrooms and sensitive individuals**. For others, **aim for the green,** for all three RF-X6 results when shielding or mitigating wireless radiation, and seek assistance if needed.

Continuous peak radiation = increased body voltage: However, the longitudinal scalar effect at low radiation levels from short bursts or pulses over six minutes has various biological effects not present in continuous peak radiation. This is why some people struggle more with low-level radiation than with continuous peak radiation. Continuous peak radiation has its own set of characteristics as far as biological effects go.

LFM-X Mode: PowerGrid Monitor Mode

This mode monitors the power grid's dynamic background magnetic fields.

The **Average and Highest** AC **50/60Hz magnetic field levels** are recorded and displayed on the meter's LED lights after a **12-hour logging session**.

Before you begin: Ensure the battery is fully charged. (only takes one hour to charge from flat)

- 1. Turn on the meter and select **RF Mode**.
- 2. Quickly move the **MODE switch** down to **LFE Mode** and back to **RF Mode** twice, within two seconds. Two lights will start blinking—one orange and one red.
- 3. Move the MODE switch down one click to LFM Mode (RF \rightarrow LFM).
 - The LED lights will sweep left to right for 20 seconds, giving you time to position the meter upright, USB socket facing down.
 (Unless under or over roadside powerlines, then move meter down on angle or flat at highest reading.)
 - Once activated, **do not move, bump, or touch** the meter for **12 hours**, as the magnetic sensors are extremely sensitive.
- 4. After 12 hours, the average and highest recorded AC 50/60Hz RMS magnetic field values will be displayed:
 - If no lights are displayed, no values were recorded, meaning no magnetic fields above 10nT were detected.
 - Battery Life: The device lasts up to 48 hours in LFM-X Mode—be sure to check the
 results before the battery runs flat.

 $RF \rightarrow LFE \rightarrow RF \rightarrow LFE \rightarrow RF ---- RF \rightarrow LFM$

Notes on Signal Sources

- Some EMF sources in the home, such as cell phones, smart meters, and Wi-Fi emitters (RF signals), change levels very rapidly due to protocol definitions.
- Cell phones adjust their transmission levels based on signal strength from the cell tower and obstacles affecting the signal. (Increased up to 100× in signal strength with just one bar from four bars.)
- Smart meters can send very fast signal bursts every few seconds, or hour/day, depending on the network type, while Wi-Fi routers adjust signal strength based on transfer load.
- The Powergrid aside, LFM and LFE sources are usually more consistent, but as with RF signals, the device must be rotated in all directions to find the highest and most accurate reading.
- Proximity to transmitters affects accuracy—measuring too close can cause the device to overread. For wireless devices, hold the meter at least 12 to 30cm away. This applies to all RF broadband meters. (Further reading on the topic of near and far fields is recommended but not covered here.)

Reporting & Sample Rate

When in **RF mode**, peak radiation levels are reported, meaning each update displays the **maximum** (or peak) level detected since the last update.

Update Rate:

Meter LEDs: ~5 times per second

o **PC Software:** ~2 times per second

Maintenance & Warranty

To ensure optimal performance and longevity, always keep the device away from excessive heat and humidity. Do not leave the battery on charge for extended periods—unplug the charger once the red light turns off to help preserve battery life. Avoid placing the meter in clothing pockets to reduce the risk of accidental damage from washing or water exposure.

Replacement batteries are available from specialty battery stores and the Mito Shop. (www.mitometer.com) They typically last between 3 to 5 years.

You may also return your Mito Meter for a calibration check and/or battery replacement. Most units should still provide accurate readings after five years.

Technical Specifications

MITO METER [EURO]	Version 1.2.07
RF Frequency range:	100MHz to 8GHz (Roll off up to 10GHz)
RF uW/m2 range via LEDs:	0.5 to 100,000uW/m2
RF uW/m2 range via Software:	0.5 to 2000,000uW/m2
RF measuring range in dBm:	-60dBm to +5dBm
RF Typical accuracy:	±6 dB
RF accuracy @2.4GHz:	±0dB
LFE (Electric Field) Frequency range:	40Hz to 50kHz
LFE measuring range via LED/Software:	1-2 to 1000 V/m with 1V/m resolution
LFE Accuracy	25%
LFM (magnetic Field) Frequency range:	40Hz to 15KHz
LFM measuring range via LED display:	10nT to 2000nT with 5nT resolution
LFM measuring range via Software:	1nT to 5000nT with 1nT resolution
LFM Accuracy	20%
LFM Accuracy @50/60Hz	± 5nT
Sampling Rate	20,000/sec RF Mode
	16,000/sec RF-X6 Mode

Building Biology Evaluation Guidelines

For MITO METER [EURO] Only - (AC) For Sleeping Areas (SBM-2025) ^

			Anomaly	No	Slight	Severe	Extreme
RF Mode	HF	High Frequency	μW/m²*	< 0.1	0.1-10	10-1000	1000 >
LFM Mode	М	Magnetic Fields	nT	< 20	20-100	100-500	500 >
LFE Mode	Ε	Electric Fields	V/m**	< 0.3	1-5	5 - 50	50 >

^{*} The meter measures down to approximately 0.5 μ W/m². (Allow for extra distance or shielding.)

^{**} The meter measures down to approximately 1-2 V/m. (Allow 1-2 meters of extra distance from the source at the first green light to account for voltage drop-off.)

[^] For further information: https://buildingbiology.com/building-biology-standard/

RF - Industry Based Limits

Radio Frequency (Pulsed Microwave Radiation) limits by country are mainly established by regulatory agencies influenced by the wireless industry. These limits are based solely on thermal effects in adults and do not account for long-term, non-thermal biological effects across all ages or body sizes.

Note that the Telco industry measure continuous RF exposure using **RMS** (Root Mean Square) power levels, not **Peak Power**, as used by Building Biology Professionals. Peak power can be up to 100 times higher than their RMS value on some devices. Cell towers peak power levels vary significantly depending on the transmission type and modulation scheme, often much higher than their RMS levels.

Country/Region	Regulation/Guideline	< 950Mhz (1GHz)	1850Mhz (2GHz) >
International (Australia)	ICNIRP Guidelines	42V/m (4.75W/m², 4,750,000μW/m²)	59V/m (9.25W/m², 10,000,000μW/m²)
Belgium	Belgisch Staatsblad F.2001-1365	21V/m (1.18W/m², 1,180,000μW/m²)	30V/m (2.31W/m², 2,310,000μW/m²)
Germany	Deutsche Verordnung	42V/m (4.75W/m², 4,750,000μW/m²)	59V/m (9.25W/m², 9,250,000μW/m²)
Italy	Decreto n.381, 1998	20V/m (1W/m², 1,000,000μW/m²)	20V/m (1W/m², 1,000,000μW/m²)
Netherlands	Health Council	51V/m (6.92W/m², 6,920,000μW/m²)	83V/m (18W/m², 18,000,000μW/m²)
Switzerland	Verordnung 1999	4V/m (0.04W/m², 40,000μW/m²)	6V/m (0.1W/m², 100,000μW/m²)
United States	IEEE C95.1	49V/m (6.33W/m², 6,330,000μW/m²)	68V/m (12W/m², 12,000,000μW/m²)
Japan	Radio-Radiation Protection Guidelines, 1990	49V/m (6.33W/m², 6,330,000μW/m²)	61V/m (10W/m², 10,000,000μW/m²)
China/Russia	MEP, MIIT Rospotrebnadzor	6V/m (0.1W/m², 100,000μW/m²)	6V/m (0.1W/m², 100,000μW/m²)

Captured Regulatory Agencies

Many first-time EMF meter users are often alarmed by the high levels of microwave radiation they encounter while out and about. This can be attributed to the explosion of wireless connectivity, smart cities, the widespread rollout of cell towers, and the influence of compromised government agencies.

Robert F. Kennedy Jr. (US Secretary of Health & Human Services) along with many others, state that agencies such as the FCC (Federal Communications Commission), ICNIRP (International Commission on Non-Ionizing Radiation Protection), and other national regulatory bodies have been compromised by the wireless industry.

Key Issues with Captured Wireless Regulatory Agencies:

1. Industry Influence on Policymaking:

- Many regulatory agencies rely on research & funding from the telecom industry itself.
- Revolving door between telecom executives and regulatory positions (e.g., former FCC chairmen moving to top telecom companies).

2. Outdated Safety Standards:

- ICNIRP and FCC guidelines are based on thermal effects only, ignoring biological effects such as DNA damage, oxidative stress, and neurological issues.
- Standards were set decades ago before modern pulsed wireless technology (5G, smart meters, and IoT devices) became widespread.

3. Conflict of Interest in Research Funding:

- Many studies downplaying RF risks are funded by telecom companies.
- Independent studies showing harm (e.g., NTP and Ramazzini studies on cancer risks)
 are often dismissed or not considered in policy decisions.

4. Lack of Precautionary Approach:

- Unlike environmental or food safety regulations, RF radiation policies do not adopt the **Precautionary Principle**.
- Countries like Russia, China, and parts of Europe have far stricter RF exposure limits, and measurement methods but Western regulatory bodies resist revising guidelines.

5. Suppression of Dissenting Scientists:

 Experts who raise concerns (e.g., Dr. Devra Davis, Dr. Martin Pall, Dr. Henry Lai, Dr. Andrew Marino.) often face professional attacks or funding cuts.

The WHO's IARC classified RF radiation as **possibly carcinogenic (Group 2B)** in 2011, yet industry-friendly agencies continue to downplay risks.

For technical support, or general inquiries visit www.mitometer.com